AVDF4 4" USB Desk Fan User Guide



IMPORTANT SAFEGUARDS

WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE REFERENCE



Important Instructions

Please read all instructions carefully before using the product.

WARNING- to reduce the risk of fire, electric shock or injury to persons or property:

- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not place the fan on a small, uneven surface or any surface which might allow fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible, level surface.
- Do not immerse or expose the product or flexible cord to rain, moisture or any other liquid.
- This product should not be used in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
- Switch off and unplug from outlet when the product is not in use.
- Do not cover the grille, or operate in close proximity to curtains, etc.
- Do not insert or allow any object to enter any openings on the fan.
- Do not immerse in water.
- If the supply cord is damaged, the unit must be replaced.

Usage Instructions

Fan operation: Always operate the fan in the upright position following all instructions and recommendations listed in this manual.

USB Function

Fan connection: Plug the power lead into the back of the fan base, and the other end into any USB port. Be sure the USB plug fits tightly in the USB port. A loose connection may cause overheating and damage to the USB plug or fan. Note:To prevent overloading a USB port, do not plug the fan into a USB port that is servicing other electrical needs.

Features:

- I. On/Off button with I speed level
- 2. DC power jack input
- 3. USB to DC power cable
- 4. Thumb screw to adjust the fan head Up/Down

Operation:

- Power the fan with USB cable.
- Move On/Off Switch to operate the fan.
- Adjust the side screw to adjust fan angle Up/Down to your desired position.
- When finished using, turn the fan power button to the "Off" position.

Attention:

Do not use any other power source other than the USB cable.

Disconnect USB cable when not using the fan.

Laptop Computer Users Note:

When plugged into your laptop USB port, the USB fan gets its power from the computer laptop. To avoid laptop battery drain, plug the laptop computer into a power supply while using this fan.

AC/DC adapter:

The fan can be connected to a AC/DC USB adapter (not included).

Cleaning and Maintenance

Follow these instructions to correctly and safely care for your fan. Please remember:

- Always unplug the fan before cleaning or assembly.
- Do not allow water to drip on or into the fan motor.
- Use a soft cloth, moistened with a mild soap solution.
- Do not use any of the following as a cleaner:- petrol, thinners or benzene to wipe the surface of the fan.

FAN STORAGE

Keep original carton for storage of the fan. Coil and tie the power cord to avoid damage during storage.







Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



Telephone: 0117 923 5375 Fax: 0117 923 5374
Victoria Road, Avonmouth, Bristol BSTI 9DB
www.addvent.co.uk